



Start/Wind Speed Switch

Temperature switch



High wind speed

Low wind speed

Turn off the hair dryer

Press this button quickly to switch among three different hair-drying temperatures.

- 1, Natural wind - with a blue light ring
- 2, Warm air - with an orange light ring, at 50°C (122 °F)
- 3, Hot air - with a red light ring, at 90°C (194°F).

Press and hold this button for 3 seconds, and the hair-drying temperature of the hair dryer will enter the alternating cycle mode of cold (natural wind)

- warm at 50°C (122°F)

- hot at 90°C (194°F).

At this time, the "+" and "-" touch buttons cannot be used.

In the alternating cycle mode of cold air, warm air and hot air, long press this button for 3 seconds to exit the alternating cycle mode. At that time, the "+" and "-" buttons will become effective. You can set the desired hair-drying temperature by touching the "+" and "-" buttons. With an increment/decrement unit of 5°C (41°F), ranging from 35°C (95°F) to 90°C (194°F), 13 different hair-drying temperatures can be set.